

Part list

Key No.	Parts Name	Key No.	Parts Name	Key No.	Parts Name	Key No.	Parts Name
1	CONTROL BOX ASSEMBLY	33	SUN GEAR ASSEMBLY	64	BALL BEARING	95	CLUTCH BAR
2	SCREW	34	GEAR SHAFT ASSEMBLY	65	JOINT GEAR	96	COIL SPRING
3	FRONT COVER-A	35	BEARING	66	CLAW PIN	97	TAP SCREW
4	FRONT COVER-B	36	INTERNAL GEAR	67	STOPPER ASSEMBLY	98	SCREW
5	SCREW	37	BALL BEARING	68	RETAINER	99	R/COVER ASSEMBLY
6	RETAINER	38	GEAR COLLAR	69	WASHER	100	LINE STOPPER
7	WASHER	39	GEAR HOLDER	70	FRAME COVER	101	SCREW
8	BUSH	40	SCREW	71	BEARING	102	O-RING
9	PIPE	41	PINION	72	WASHER	103	NUT
10	WORM SHAFT	42	RETAINER	73	GEAR METAL	104	METAL
11	LEVEL WIND ASSEMBLY	43	RETAINER	74	RATCHET	105	SPEED LEVER
12	BUSH	44	JOINT GEAR-B	75	WASHER	106	TOOTH WASHER
13	RETAINER	45	RETAINER	76	DRIVE GEAR	107	NUT
14	TRAVERSE GEAR	46	COLLAR	77	WASHER	108	LEVER CAP
15	LEVEL WIND PIN	47	JOINT SHAFT	78	WASHER-D1	109	BEARING
16	WASHER	48	JOINT GEAR-A	79	WASHER-A	110	RETAINER
17	NUT	49	LEFT SIDE PLATE	80	WASHER-D2	111	O-RING
18	PILLAR	50	SPEED DIAL	81	DRAG SPRING	112	WASHER
19	SCREW	51	DIAL GEAR	82	WASHER	113	WASHER
21	SCREW	52	WASHER	83	BUSH	114	TENSION KNOB
22	MOTOR COVER ASSEMBLY	53	TAP SCREW	84	SCREW	115	COLLAR
23	O-RING	54	NUT	85	RETURN LEVER	116	CLICK HOLDER ASSEMBLY
24	MOTOR ASSEMBLY	55	SPRING WASHER	86	T-NUT	117	STAR DRAG ASSEMBLY
25	WASHER	56	CONNECTOR ASSEMBLY	87	C/LEVER CAM ASSEMBLY	118	WASHER
26	BALL BEARING	57	WATER CAP	88	CAM SPRING	119	HANDLE NUT
27	RETAINER	58	전원 CODE ASSEMBLY	89	KICK LEVER SPRING	120	RETAINER
28	SPOOL ASSEMBLY	59	CLUTCH LEVER	90	KICK LEVER	121	SCREW
29	FRAME ASSEMBLY	60	SCREW	91	SCREW	122	HANDLE ARM ASSEMBLY
30	TAP SCREW	61	SCREW	92	CLUTCH CAM		
31	BALL BEARING	62	WASHER	93	PLATE		
32	BEARING COLLAR	63	METAL COLLAR	94	SPOOL GEAR		