


SOL

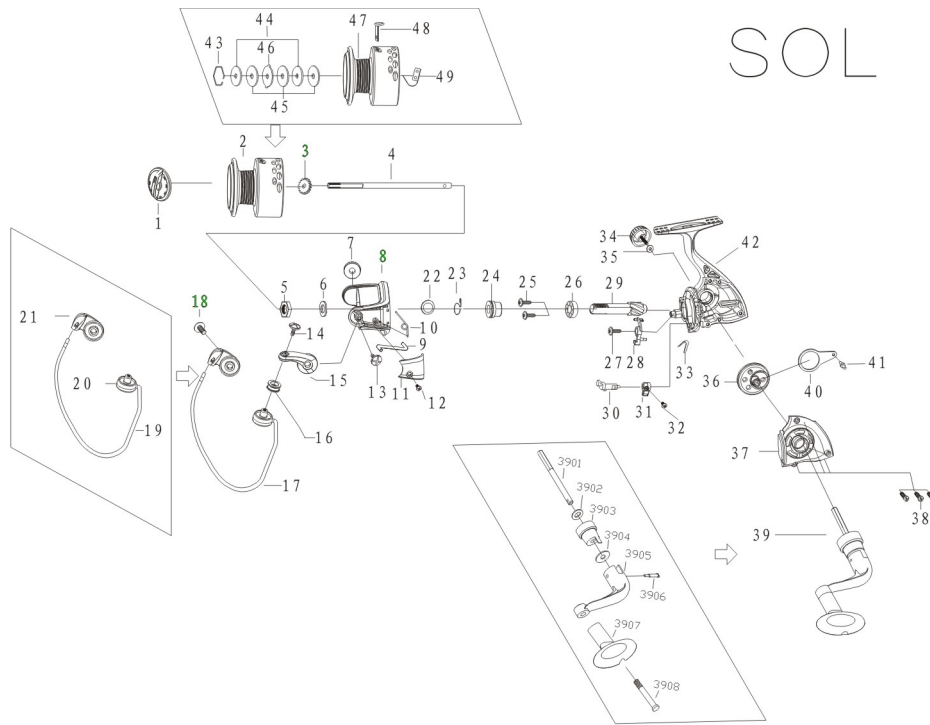

- | | | |
|---------------------------------|------------------------------------|-------------------------------------|
| 1.drag knob assembly | 22.silent spring bushing washer | 42.body |
| 2.spool assembly | 23.silent spring | 43.hexangular retainer |
| 3.spool click gear fixed washer | 24.silent spring bushing | 44.key washer |
| 4.main shaft | 25.bail bearing fixed washer screw | 45.washer |
| 5.pinion gear nut | 26.pinion gear ball bearing | 46.ear washer |
| 6.rotor washer | 27.anti-reverse pawl fixed screw | 47.spool |
| 7.rotor balance weight | 28.anti-reverse pawl | 48.line hook |
| 8.rotor | 29.pinion gear | 49.spool click gear |
| 9.bail trip shaft spring | 30.anti-reverse shaft | handle assembly |
| 10.bail arm spring | 31.anti-reverse switch | 3901.handle cap insert teeth washer |
| 11.bail arm side cover | 32.anti-reverse pawl screw | 3902.joint washer |
| 12.bail arm side cover screw | 33..anti-reverse spring | 3903.plastic joint |
| 13.bail arm fixed screw | 34.handle cap | 3904.handle washer |
| 14.line roller screw | 35.handle cap washer | 3905.handle |
| 15.bail arm | 36.drive gear | 3906.handle joint fixed pin |
| 16.line roller | 37.body cover | 3907.handle arm |
| 17.bail assembly | 38.body cover screw | 3908.handle rivet |
| 18.bail holder fixed screw | 39.handle assembly | |
| 19.bail | 40.connection washer | |
| 20.line roller shaft | 41.main shaft fixed pin | |
| 21.bail holder | | |